- 1 Comp. Loc. Parking
- 1.1 Parking aid
- ◆ ⇒ "1.1.1 Parking aid, front", page 1
- 1.1.1 Parking aid, front




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.






- 1 Right front center parking aid sensor -G253-
- 2 Right front parking aid sensor -G252-
- 3 Right front parallel parking assistance sensor -G569-
- 4 Parking aid button -E266-
- 5 Parallel parking assistance button -E581-
- 7 Parking aid control module -J446
- 7 Parallel parking assistance control module -J791
- 9 Front parking aid warning buzzer -H22-
- 11 Left front parallel parking assistance sensor -G568-
- 12 Left front parking aid sensor -G255-
- 13 Left front center parking aid sensor -G254-

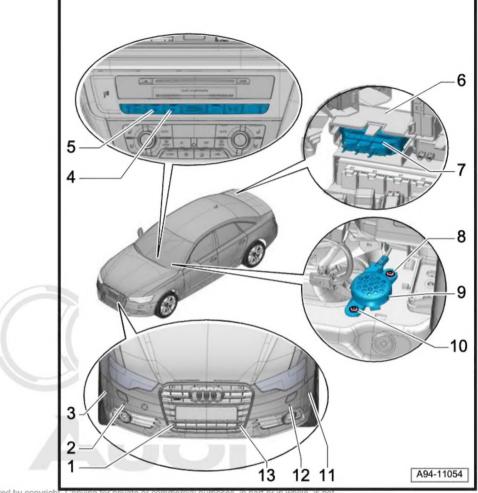

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



## 1.1.2 Parking aid, rear

- 1 Rear parking aid warning buzzer -H15-
- 3 Left rear center parking aid sensor -G204-
- 4 Left rear parking aid sensor -G203-
- 5 Left rear parallel parking assistance sensor -G716-
- 6 Right rear parallel parking assistance sensor -G717-
- 7 Right rear parking aid sensor -G206-
- 8 Right rear center parking aid sensor -G205-
- 10 Parallel parking assistance control module -J791

